










### Aluminium Tent

	<p>1. Place your EDGE canopy on a flat position.</p>
	<p> 2. Pull your EDGE canopy out diagonally until it's getting firm with the cloth settled.</p>
	<p>3. Turn the corner cloth over to find out the button of the connectors, slide them down to the locks in place, and repeat the process on the remaining buttons.</p>
	<p>4. Grab the middle frame of your EDGE canopy with up-shaking slowly and repeatedly until it stretches firmly.</p>
	<p>5. Slide the adjustable legs of your EDGE canopy down to the locks in place, repeat the process on the remaining legs that can be adjusted on 3 positions each one.</p>
	<p>6. (This step is not explicitly described in the text but is shown in the image.)</p>
	<p>7. (This step is not explicitly described in the text but is shown in the image.)</p>



We don't advise you used your EDGE canopy in windy days, but if you used it, please


A- attached some heavies such as sand-bags.

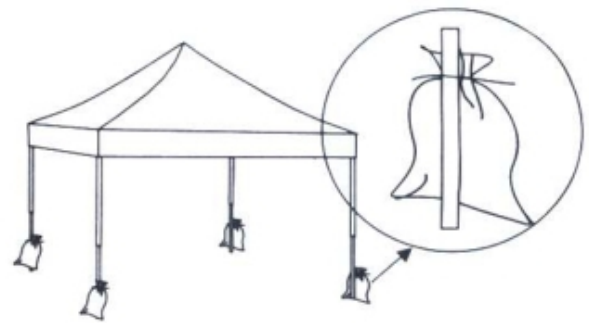

B- Use the strong ropes to have the eyelets on the each corner of the cloth and immovable objects on the floor connected.



C- Connect the plastic pieces and ground by nails/pegs drilling through!

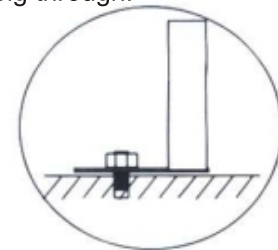

It's best to follow all 3 ways of them when a bad weather look place!



**Warning:**  
To shrink your EDGE canopy after using, please repeat the steps from 5th to 1st oppositely and carefully for preventing the damage of your EDGE canopy.