

Alpha

- Components:

Cable system: 2 kits.




Acrylic pocket

A4 vertical: 4 Unid.



Mini panel clip: 16 Unid.

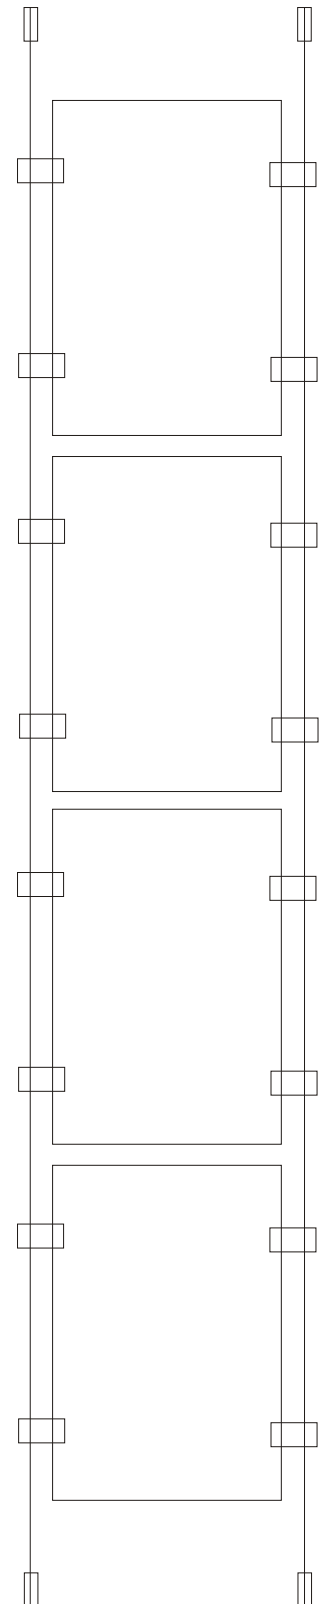

1. Place one end of the wire on the roof and the other end into the soil by adjusting the length of the cable.
2. Put the clamp on the wire by one of their holes and tighten the nut.
3. Place the folder methacrylate through the opening of the clamp and tighten the nut.